



IANIRO

IANILED 6, 7 & 54 (18+18+18) DRIVER DOMINO CUBE
DECEMBER 2008 - INSTRUCTIONS FOR USE



Driver Ianiled 54



Driver Ianiled 6 & 7

1. Connect power supply to the Driver. Press “NORM/ON-OFF” button 1 sec to switch on the light.
2. Use the potentiometer to dim up-down the intensity of the light. The colour temperature is set at 5600° and does not change when dimming.
3. When switched on for the first time, the light is in “factory-set” and Yellow Led is on.

COOL

1. Press COOL button, the Blue Led is on. The light is set on colour temperature of 6500° k.
2. Use potentiometer to dim up-down the intensity of the light. The colour temperature does not change when dimming.

WARM

1. Press WARM button, the Amber Led is on. The light is set on a warmer tone of 4500° k.
2. Use potentiometer to dim up-down the intensity of the light. The colour temperature does not change when dimming.

COLOR SET

This is a custom manual color set of the Red/White mix.

1. Press COLOR SET button for 1 sec to recall the factory standard set. (100% white - 100% red). The Green Led is on (Fixed, no flashing)..
2. Press COLOR SET button 3 sec., the Green Led starts flashing. You can adjust your preferred colorimetry moving the potentiometer from Blue (cool) to Red (warm).
3. Press again 1 sec to record in memory your personal color set. The Green Led is again on Fixed (no flashing). The potentiometer will act again as dimmer.

Note

Press COOL NORM WARM AND COLOR SET, to recall the various colorimetries and use the potentiometer to dim up and down the intensity of the light, keeping the personal memorized colorimetry.

OFF

Press 3 sec the button OFF. The light switches off.
The last status will be remembered when switching on again.